


🇩🇪 V-Maxx Autosport Einbauanleitung Gewindefahrwerk
🇬🇧 V-Maxx Autosport installation instructions Coilover-kit
RENAULT TRAFIC - FIAT TALENTO - OPEL VIVARO - NISSAN PRIMASTAR


🇬🇧 RE-use original top mount parts
🇩🇪 Serienmäßige obere Federbeinteile wiederverwenden

🇬🇧 Install the helper spring first and main spring after
🇩🇪 Die Vorspannfeder als erstes installieren, danach die Hauptfeder

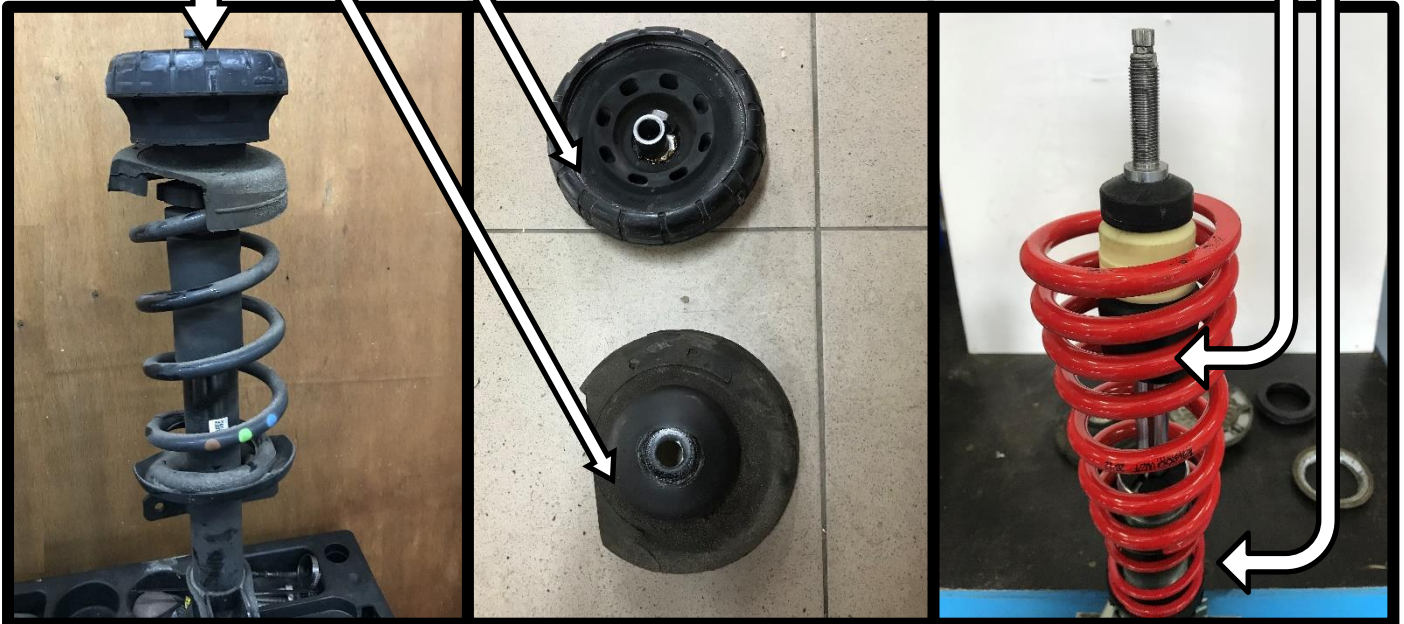



🇬🇧 Install the original steel spring seat to the spring using the supplied Silicon grease
🇩🇪 Serienmäßigen oberen Stahl Federteller mit den Silikonen fett installieren

🇬🇧 RE-use and install the original strut bearing to the original steel spring seat
🇩🇪 Serienmäßigen oberen Domlager wiederverwenden und auf den Stahl Federteller installieren

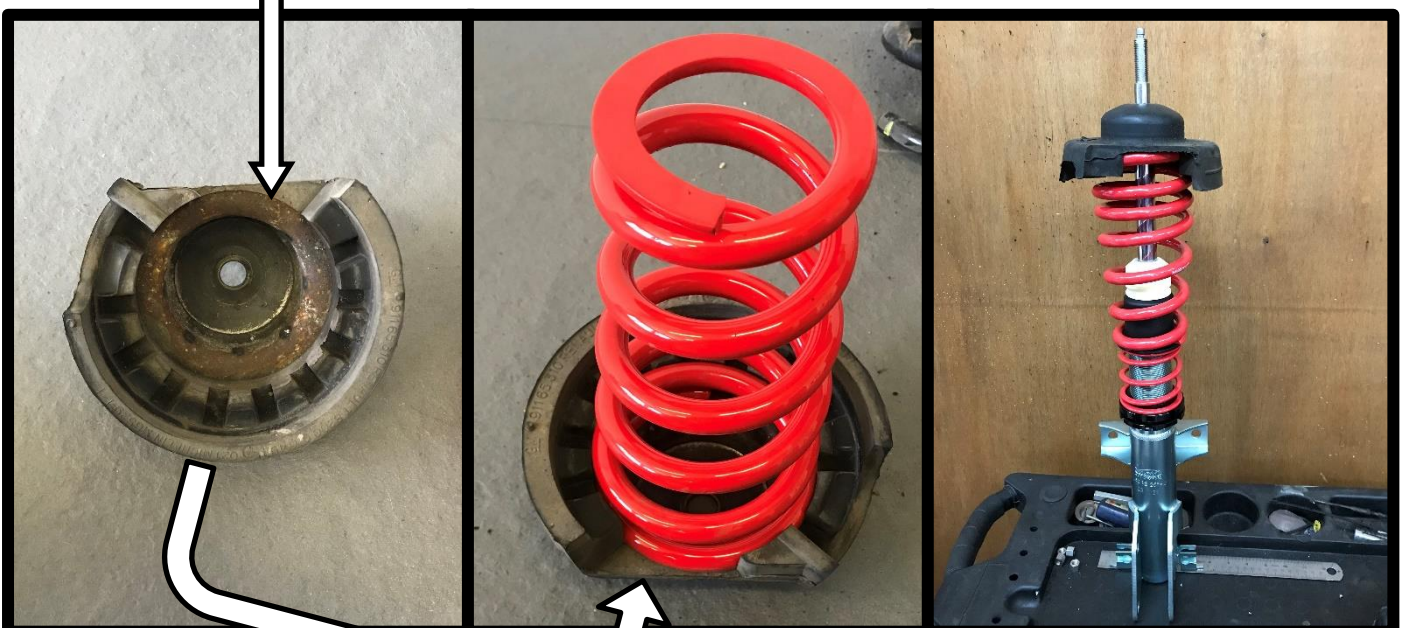


🇬🇧 Install the original rubber spring seat to the original strut bearing
🇩🇪 Serienmäßigen Aluminium und Gummi Federteller auf den Serienmäßigen oberen Domlager installieren

🇬🇧 RE-use the original nut
🇩🇪 Serienmäßigen Mutter wiederverwenden

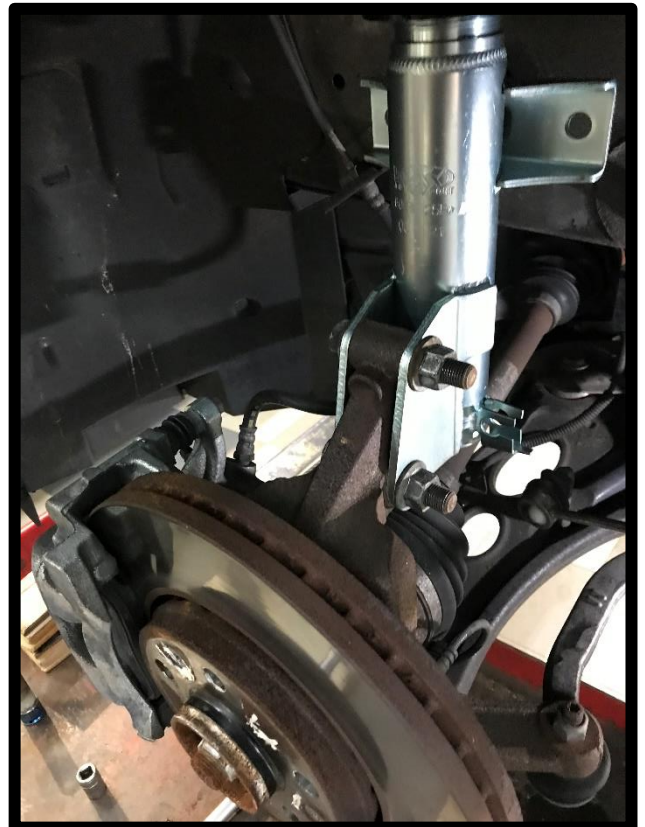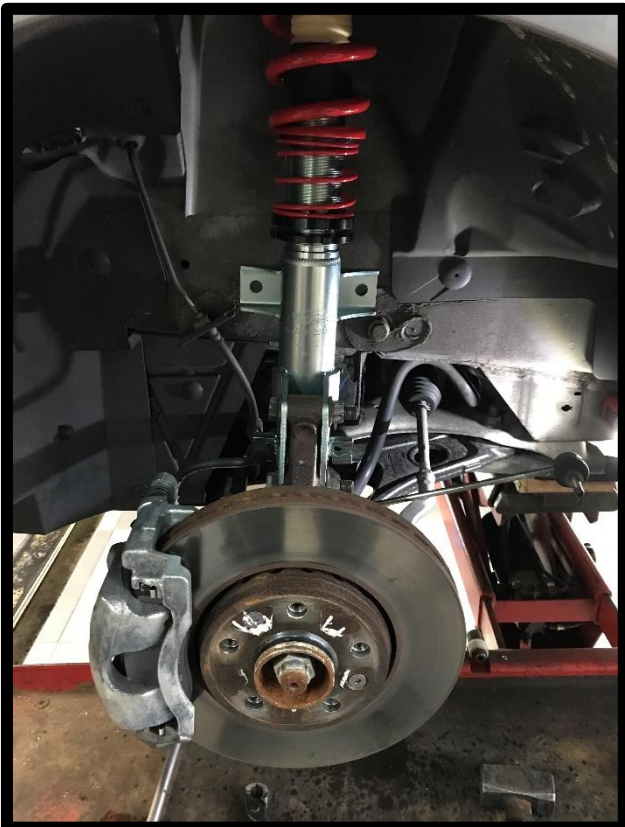

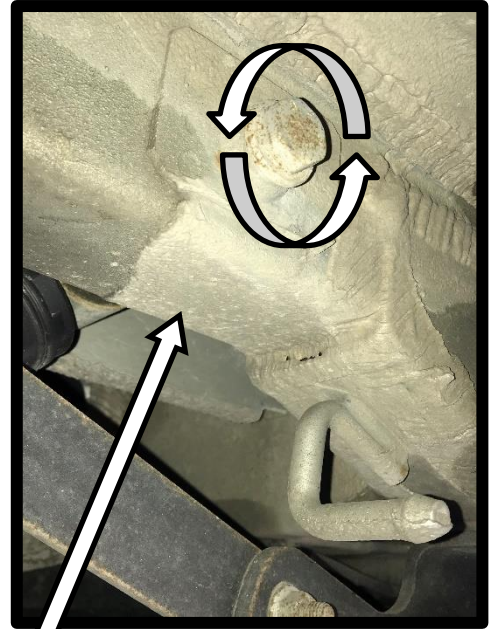

Copyrights V-MAXX® Autosport B.V., The Netherlands. All rights reserved. Reprints, copying and use of logo's, also partially, only after written permission of V-MAXX® Autosport B.V. No responsibility is taken for printing errors. All rights reserved. All images and pictures of cars in this document/website, serve illustration purposes only and do not imply a (quality) relationship between V-MAXX® Autosport B.V. and the manufacturers of the cars in question. All transactions are subject to our general terms and conditions.




 Loosen and uninstall the original rear shockabsorber



 Serienmäßigen Stoßdämpfer Bolzen lösen und ausbauen Staubschutz

 DO NOT re-use original lower shockabsorber part

 Serienmäßigen hinteren Stoßdämpferteil NICHT wiederverwenden

 uninstall the original rear spring and lower springseat

 Serienmäßigen hinteren Feder und unteren Federteller ausbauen

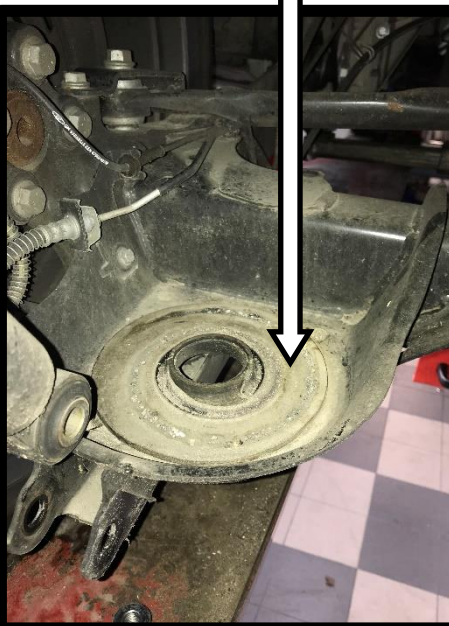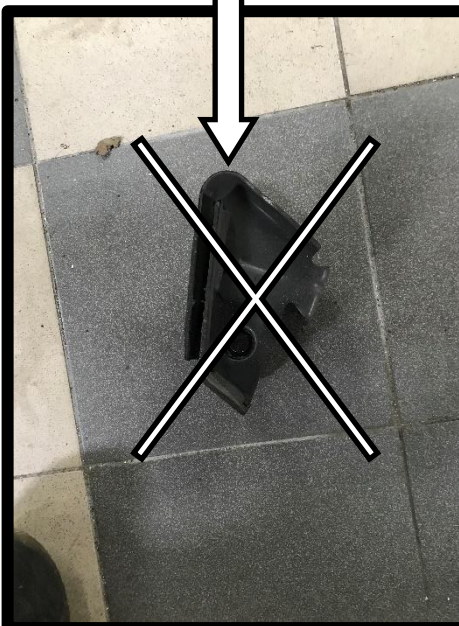

Copyrights V-MAXX® Autosport B.V., The Netherlands. All rights reserved. Reprints, copying and use of logo's, also partially, only after written permission of V-MAXX® Autosport B.V. No responsibility is taken for printing errors. All rights reserved. All images and pictures of cars in this document/website, serve illustration purposes only and do not imply a (quality) relationship between V-MAXX® Autosport B.V. and the manufacturers of the cars in question. All transactions are subject to our general terms and conditions.




🇬🇧 Clean spring seat of the rear axle
 🇩🇪 Untere Feder Auflage an die


🇬🇧 Clean the lower rubber spring seat
 🇩🇪 Untere Gummi Feder Auflage sauber machen

🇬🇧 Clean the lower rubber spring seat
 🇩🇪 Untere Gummi Feder Auflage sauber machen

🇬🇧 RE-install original bottom rubber Springseat
 🇩🇪 Serienmäßigen unteren Gummi-Federteller wiederverwenden

🇬🇧 Install helper spring to original bottom rubber Springseat
 🇩🇪 Vorspannungsfeder auf den Serienmäßigen unteren Gummi-Federteller installieren

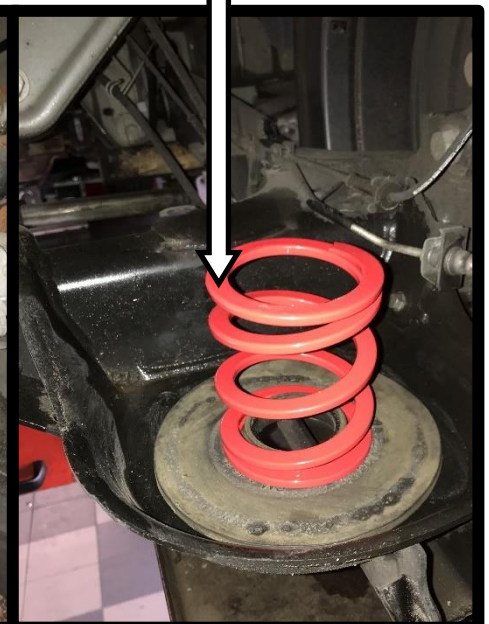

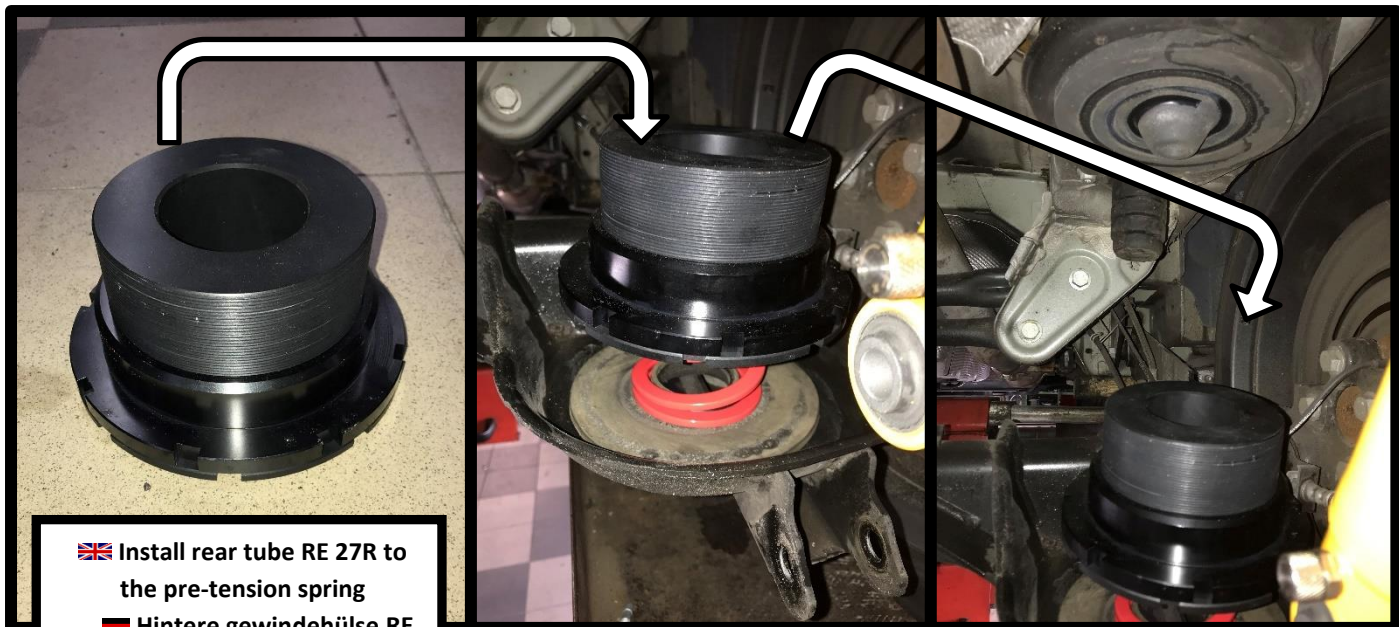

🇬🇧 Install rear tube RE 27R to the pre-tension spring
 🇩🇪 Hintere gewindehülse RE 27R auf die Vorspannungsfeder

🇬🇧 Install HR92*-AD04 to the V-MAXX rear shockabsorber
 🇩🇪 HR92*-AD04 Buchsen an den Hinteren V-MAXX Stoßdämpfer installieren

🇬🇧 Install rear spring to the tube
 🇩🇪 Feder auf die Hintere gewindehülse montieren

🇬🇧 Install the rear shockabsorber
 🇩🇪 Hintere Stoßdämpfer montieren

